RONDA startech Cal. 5050.B

User's Manual

- Brief specifications	16
- Description of the display and control buttons	17
- Setting the time / date	18-21
- Operation of the chronograph	22-27

In case your watch needs to be repaired or to raise claims under a guarantee, please contact the point of sales



RONDA startech Cal. 5050.B

Brief specifications

Time/Date

- Hour hand
- · Minute hand
- · Small second hand (position 3h)
- · Date (position 6h)

Chronograph

- 1/10 second counter (position 6h)
- Hour counter up to 12 hours (position 9h)
- Minute counter up to 30 minutes (position 9h)
- Centre stop-second

General

- Battery type: 395 (diameter 9.5mm x 2.6mm / SR 927 SW)
- Accuracy: +20 / -10 seconds per month

Description of the display and control buttons

Display elements

Control buttons



16



Setting the time

- Pull out the crown to position III (the watch stops).
- 2 Turn the crown until you reach the correct time **8.45**.

3*Push the crown back into position I.

Please note:

18

In order to set the time to the exact second, must be pulled out when the second hand is in position «60» (l). Once the hour and minute hands have been set, ③ must be pushed back into position I at the exact second.



Setting the date (quick mode)

- 1 Pull out the crown to position II (the watch continues to run).
- 2 Turn the crown until the correct date 1 appears.
- 3 Push the crown back into position I.

Please note:

During the date changing phase between 9 PM and 12 PM; the date must be set to the date of the following day.

An extreme acceleration in setting the date with quick mode can induce a false date indication. The synchronization is re-established by setting the date from 01 till 31 (crown in position II).





Setting the date/time

Example:

- Date / time on the watch: 17 / 1.25 AM
- Present date / time: 4 / 8.30 PM
- Pull out the crown to position II (the watch continues to run).

2 Turn the crown until yesterday's date appears 3.



- Pull out the crown to position III (the watch stops).
- Turn the crown until the correct date
 appears.
- S**Continue to turn the crown until the correct time 8.30 PM appears.
- Push the crown back into position I.

Please note:

21

* To set your watch to the exact second, please refer to the chapter entitled «setting the time».

** Please observe the AM/PM clock rhythm.

20

Chronograph:

- The chronograph's hour counter measures times up to 12 hours.
- The minute counter measures 30 minutes per rotation.
- The center stop-second measures 60 seconds per rotation.
- The ¹/₁₀ second counter measures 1 second per rotation.



Please note:

Before using the chronograph functions, please ensure that:

 \rightarrow the crown is in **position I** (= normal position).

→ the 4 chronograph hands are precisely at zero position following activation of push-button B. Should this not be the case, the positions of the hands must be adjusted (see the chapter entitled «adjusting the chronograph hands to zero position»).





Chronograph: Basic function

(Start / Stop / Reset)

23

Example: **1** Start: Press push-button A.

 Stop: to stop the timing, press push-button A once more and read the 4 chronograph counters: 4h/20 min/5 sec/⁷/10 sec

Zero positioning: Press push-button B. (The 4 chronograph hands will be reset to their zero positions).





Chronograph: Accumulated timing

Example:

- Start: (start timing)
- 2 Stop: (e.g. 15 min 5 sec following 1)
- -- 3 Restart: (timing is resumed)
 - (a*Stop: (e.g. <u>10 min 5 sec</u> following (a)) = <u>25 min 10 sec</u> (The accumulated measured time is shown)

6 Reset:

The 4 chronograph hands are returned to their zero positions.

Please note:

24

Following (a), the accumulation of the timing can be continued by pressing pushbutton A (Restart / Stop, Restart / Stop, ...)





Chronograph: Intermediate or interval timing

Example:

Start: (start timing)

Display interval:

e.g. **10 minutes 10 seconds** (timing continues in the background)

- Making up the measured time: (the 4 chronograph hands are quickly advanced to the ongoing measured time).
 - Stop: (Final time is displayed)
 - Reset: 🖉

The 4 chronograph displays are returned to their zero position

Please note:

25

* Following (a), further intervals or intermediates can be displayed by pressing **push-button B** (display interval / make up measured time, ...)



Adjusting the chronograph hands to zero position

Example:

One or several chronograph hands are not in their correct zero positions and have to be adjusted (e.g. following a battery change).

- Pull out the crown to position III (all 4 chronograph hands are in their correct or incorrect zero position).
- Weep push-buttons A and B depressed simultaneously for at least 2 seconds (the centre stop-second rotates by 360° → corrective mode is activated).



27

Adjusting the centre stop second Single step 💉 A 1 x short Continuous 🗶 A lona Adjusting the next hand B 👟 Adjusting the ¹/10 second counter hand (position 6h) Sinale step 💉 A 1 x short Continuous 🗶 A long Adjusting the next hand B

Adjusting the minute counter hand and the hour counter hand (mechanical coupled) Single step A 1 x short Continuous A I ong

3 Returning the crown to position I Termination of the chronograph hands

adjustment (can be carried out at any time).