# RONDA startech Cal. 5030.D

### User's Manual

- Brief specifications	16
- Description of the display and control buttons	17
- Setting the time / date	18–21
- Operation of the chronograph	22–27

In case your watch needs to be repaired or to raise claims under a guarantee, please contact the point of sales



## RONDA startech Cal. 5030.D

### **Brief specifications**

### Time/Date

- Hour hand
- · Minute hand
- · Small second hand (position 3h)
- · Date (position 4h)

### Chronograph

- Hour counter up to 12 hours (position 6h)
- Minute counter up to 30 minutes (position 9h)
- · Centre stop-second


### General

- · Battery type: 395 (diameter 9.5mm x 2.6mm / SR 927 SW)
- Accuracy: +20 / -10 seconds per month


## Description of the display and control buttons

### **Display elements**

### **Control buttons**

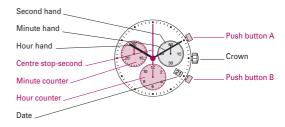

17

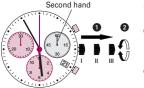

## Setting the time

- **1**\*Pull out the crown to position **III** (the watch stops).
- 2 Turn the crown until you reach the correct time 8:45.



## Setting the date (quick mode)

 Pull out the crown to position II (the watch continues to run).

2 Turn the crown until the correct date 1 appears.

O Push the crown back into position I.

Please note:

19

During the date changing phase between 9 PM and 12 PM: the date must be set to the date of the following day.

3\*Push the crown back into position I.


#### Please note:

18

\* In order to set the time to the exact second. 1 must be pulled out when the second hand is in position «60» (I).

Once the hour and minute hands have been set, 3 must be pushed back into position I at the exact second.



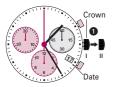


## Setting the date/time following a battery change

Example:

- Date / time on the watch: 17 / 1:25 AM - Present date / time: 4 / 8:30 PM
- Pull out the crown to position II (the watch continues to run).

2 Turn the crown until yesterday's date appears 3

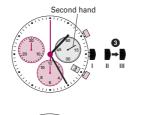

- It is a state of the state o
- Turn the crown until the correct date
  appears.
- Continue to turn the crown until the correct time 8:30 PM appears.
- 6 Push the crown back into position I.

### Please note:

21

<sup>4</sup> To set your watch to the exact second, please refer to the chapter entitled «setting the time».

\*\*Please observe the AM/PM clock rhythm.



## Chronograph:

- The chronograph's hour counter measures times up to 12 hours.
- The minute counter measures 30 minutes per rotation.
- The center stop-second measures 60 seconds per rotation..



### Please note:

Before using the chronograph functions, please ensure that:

- → the crown is in **position I** (= normal position).
- → the 3 chronograph hands are precisely at zero position following activation of push-button B. Should this not be the case, the positions of the hands must be adjusted (see the chapter entitled «adjusting the chronograph hands to zero position»).





## **Chronograph: Basic function**

(Start / Stop / Reset)

Example:

1 Start: Press push-button A.

Stop: to stop the timing, press pushbutton A once more and read the three chronograph hands: 1h / 20min / 10 sec.

3 Zero positioning: ....\* Press push-button B.

(The three chronograph hands will be reset to their zero positions).

on B 23





## Chronograph: Accumulated timing

Example:

- 1 Start: (start timing)
- 2 Stop: (e.g. 15 min 5 sec following 1)
- \*3 Restart: (timing is resumed)
- **4**\*Stop: (e.g. <u>13 min 5 sec</u> following **3**) = <u>28 min 10 sec</u>

(The accumulated measured time is shown)

### 6 Reset: ....\*

The three chronograph hands are returned to their zero positions.

### Please note:

24

\* Following ④, the accumulation of the timing can be continued by pressing pushbutton A (Restart / Stop, Restart / Stop, ...)



Hour counter Push-button B



### **Chronograph:**

## Intermediate or interval timing

Example:

- Start: (start timing)
- Display interval:
  - e.g. 10 minutes 10 seconds (timing continues in the background)
  - Making up the measured time: (the 3 chronograph hands are quickly advanced to the ongoing measured time).
  - Stop: (Final time is displayed)
  - Reset:

The 3 chronograph displays are returned to their zero position


### Please note:

\* Following ③, further intervals or intermediates can be displayed by pressing **push-button B** (*display interval / make up measured time*, ...)

3

25



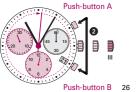


## Adjusting the chronograph hands to zero position

Example:

One or several chronograph hands are not in their correct zero positions and have to be adjusted (e.g. following a battery change).

- Pull out the crown to position III (all 3 chronograph hands are in their correct or incorrect zero position).
- ② Keep push-buttons A and B depressed simultaneously for at least 2 seconds (the centre stop-second rotates by 360° → corrective mode is activated).

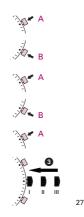

Adjusting the centre stop second Single step 🖌 A 1 x short Continuous 🖌 A lona Adjusting the next hand B Adjusting the hour counter hand (position 6h) Single step 🖌 A 1 x short Continuous 🖌 A lona Adjusting the next hand B 🛰 Adjusting the minute counter hand (position 9h) Single step 🖌 A 1 x short Continuous 🗶 A long

8 Returning the crown to position I

Termination of the chronograph hands adjustment (can be carried out at any time).